



EW420
Intel 6th Generation Core i Fanless BOX PC

USER MANUAL

Connect
Ideas.
Shape
solutions.



Revision History

Reversion	Date	Description
1.0	2018/01/09	Official Version



Warning!

This equipment generates, uses and can radiate radio frequency energy and if not installed and used in accordance with the instructions manual, it may cause interference to radio communications. It has been tested and found to comply with the limits for a Class A computing device pursuant to FCC Rules, which are designed to provide reasonable protection against such interference when operated in a commercial environment. Operation of this equipment in a residential area is likely to cause interference in which case the user at his own expense will be required to take whatever measures may be required to correct the interference.

Electric Shock Hazard – Do not operate the machine with its back cover removed. There are dangerous high voltages inside.

Caution

Risk of explosion if the battery is replaced with an incorrect type.

Batteries should be recycled where possible. Disposal of used batteries must be in accordance with local environmental regulations.



Safety Precautions

Follow the messages below to prevent your systems from damage:

- ◆ Avoid your system from static electricity on all occasions.
- ◆ Prevent electric shock. Don't touch any components of this card when the card is power-on. Always disconnect power when the system is not in use.
- ◆ Disconnect power when you change any hardware devices. For instance, when you connect a jumper or install any cards, a surge of power may damage the electronic components or the whole system.



Table of Contents

Revision History	1
Warning!.....	2
Chapter 1 Getting Started	5
1.1 Features	5
1.2 Specifications	5
1.3 Dimensions.....	7
1.4 Brief Description of EW420	8
Chapter 2 Hardware	10
2.1 Motherboard Introduction	10
2.2 Specifications	10
2.3 Jumpers and Connectors Location	14
2.4 Jumpers Setting and Connectors.....	16
Chapter 3 BIOS Setup.....	37
3.1 Operations after POST Screen.....	37
3.2 BIOS SETUP UTILITY	37
3.3 MAIN SETTING	38
3.4 Advanced Settings	39
3.5 Chipset Settings	44
3.6 Security Settings	45
3.7 Boot Settings	47
3.8 Save & Exit Settings.....	48
Chapter 4 Installation of Drivers.....	50
4.1 Intel(R) 100 Series Chipset Driver	51
4.2 Intel(R) HD Graphics 530 Chipset Driver	54
4.3 Realtek ALC269 HD Audio Driver	58



Chapter 1

Getting Started

1.1 Features

- Intel 6th Gen. Skylake Core i3/i5/i7 CPU
- 2 x SO-DIMM, up to 32GB
- Easy accessible storage design
- Fanless Design
- Multi-expansion slot
- Three independent display ports and support 4K UHD display
- Wide range DC 9~36V power input

1.2 Specifications

	EW420	EW420 with 2xPCIe x 1 slot
System		
CPU	Socket H4,6th Generation Intel Core-i Processor	
Chipset	Intel 100 series Chipset(H170)	
Memory	2 x 260-pin SO-DIMM up to 32GB DDR4 1866/2133 MHz	
Outside IO Port		
USB:	Front: 4 x USB 3.0 type A, Rear: 2 x USB 2.0 type A	
Serial/Parallel:	Front: 2 x RS-232, COM3/COM4 Rear: 2 x RS-232/422/485 , COM1/COM2, default RS-232	
Audio:	1 x Line-in, 1 x Line-out, 1 x Mic	
Display Interface:	1 x Display port, 1 x DVI-I, 1 x HDMI	
GPIO:	1 x 4-in/4-out digital I/O, 1-5V, 1-GND	
POWER:	1 x 3-pin DC power input terminal, 1 x power button with light	
Storage Space		
Storage	2 x 2.5" SATA3 HDD bay (Easy accessible)	
Expansion		
Expansion Slot	3 x Mini PCIe slots full size (one shared with mSATA) (Only for EW420 with 2xPCIe x 1 slot) 2 x PCIe slot via TB-554 Series: 1 x PCIe x4 or 2 x PCIe x1 slot for option	
Wireless LAN		
Wireless LAN	802.11 b/g/n via Mini-PCIe module card half size for option	

	Rear side design Antenna hole	
Power		
Power Input	DC 9~36V power input	
Power Consumption	MAX: 56.3W	MAX: 60.4W
Mechanical		
Construction	Plating Titanium Gray Aluminum Heatsink and Steel Chassis	
Mounting	Wall Mount	
Dimensions	277.8 x 230 x 86.7 mm	280 x 230 x 134.6 mm
Net Weight	4.5 Kg	5.5 kg
IP Rating	IP 20	
Environmental		
Operating Temperature	0~50°C	
Storage Temperature	-40~85°C	
Storage Humidity	10 to 90% @ 40°C, non-condensing	
Certification	CE / FCC Class A	
Operating System Support	Windows Embedded 8.1 Industry Pro, Windows Embedded 8 Standard, Windows 10 IOT 2016	

1.3 Dimensions


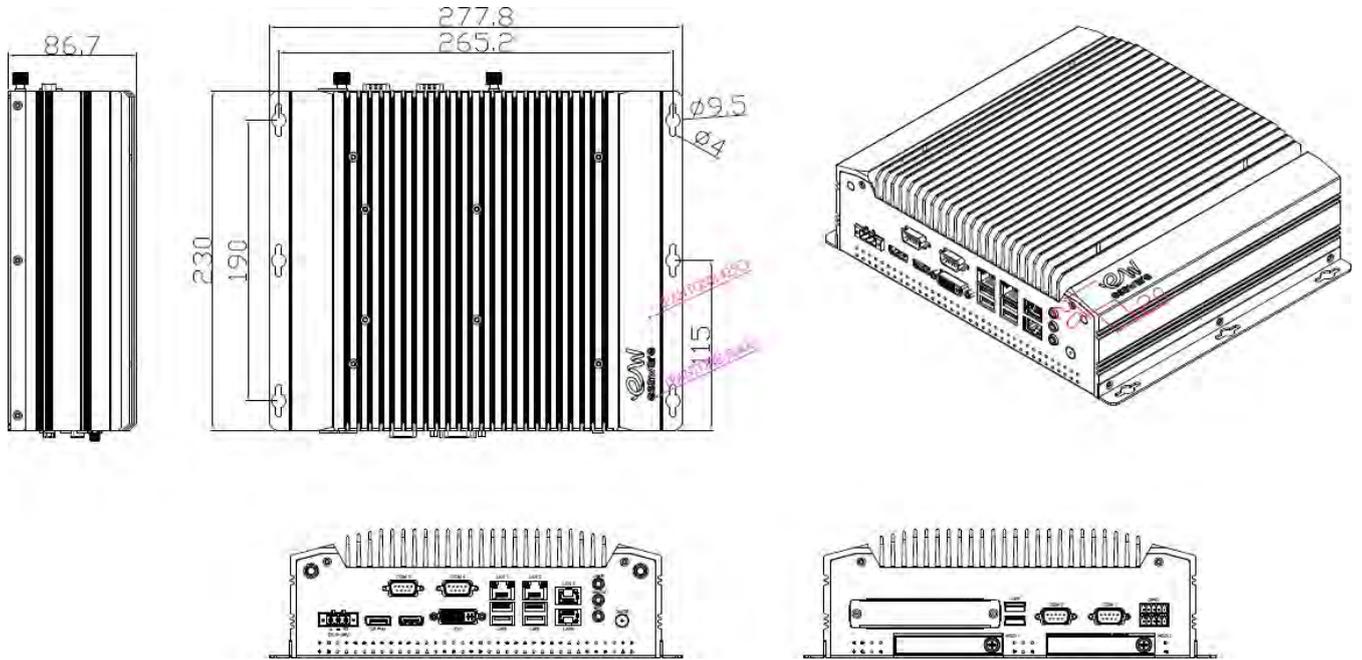


Figure 1.1: Dimensions of EW420

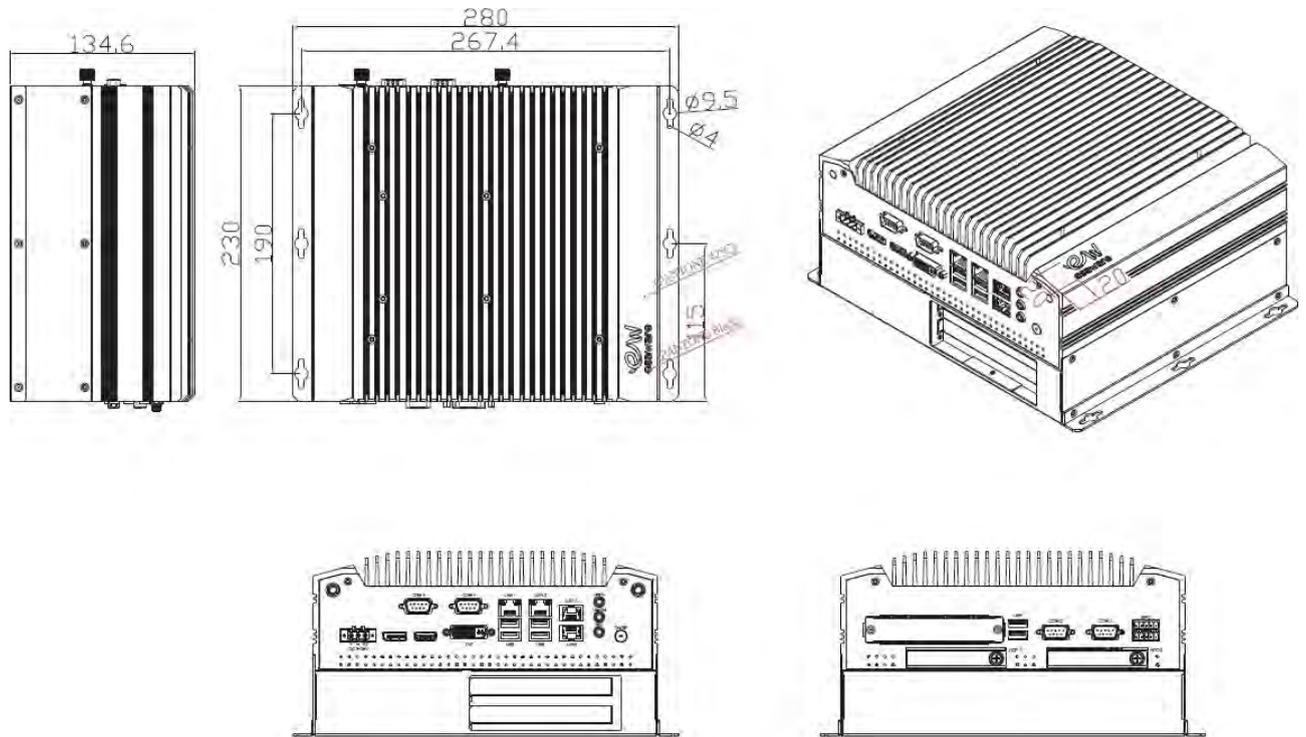

UNIT: mm
Tolerance: ±0.5

Figure 1.2: Dimensions of EW420 with 2xPCIe x 1 slot

1.4 Brief Description of EW420

The EW420 is a fanless design high-efficiency BOX PC, powered by Intel 6th Generation Skylake Core i3/i5/i7 CPU and supports 2 x SO-DIMM DDR4 slots 1866/2133 memory. It comes with 4 x USB 3.0 type A, 2 x USB 2.0 type A, 1 x Line-in, 1 x Line-out, 1 x Mic and so on. It supports 2 x 2.5" SATA3 HDD space which is easy accessible designed and wide range DC 9~36V power input. The model has 3 x Mini PCIe full size (one shared with mSATA) slots for expansion. The model is plating titanium gray aluminum heatsink and steel chassis design, and can be wall mounted. The EW420 works very well along with any of our display series and it absolutely can provide an easy way to perform control and field maintenance.



Figure 1.3: Front view of EW420



Figure 1.4: Front view of EW420 with 2xPCIe x 1 slot



Figure 1.5: I/O rear view of EW420



Figure 1.6: I/O rear view of EW420 with 2xPCIe x 1 slot

2.1 Motherboard Introduction


SBC-7113 is a Non-standard industrial motherboard developed on the basis of Intel H170, which provides abundant peripheral interfaces to meet the needs of different customers. Also, it features four GbE ports, 6-COM ports and two Mini PCIE configuration. To satisfy the special needs of high-end customers, ADOtec designed 80Pin PCIe x4 expansion interface. The product is widely used in various sectors of industrial control.

2.2 Specifications

Specifications	
Board Size	214mm x 225mm
CPU Support	installing the 6th Generation intel Core i3/i5/i7 6xxxTE Processors (up to 35W). <ul style="list-style-type: none"> - Intel Core I3-6100TE 2.70GHz 35W - Intel Core I5-6500TE 2.30 GHz (up to 3.30 GHz) 35W - Intel Core I7-6700TE 2.40 GHz (up to 3.40 GHz) 35W
Chipset	Intel H170
Memory Support	2x SO-DIMM (260pins), up to 32GB DDR4 1866/2133MHz FSB
Graphics	Intel HD Graphics 530 (I3-6100TE/I5-6500TE/I7-6700TE)
Display Mode	1x DVI-I interface 1x HDMI interface 1x DP interface 1x VGA interface
Support Resolution	Up to 4096 x 2304 for HDMI Up to 4096 x 2304 for Display Port Up to 2560 x 1600 for DVI-I Up to 1920 x 1200 for VGA
Three Display	HDMI + DVI-I + DP HDMI + DVI-I +VGA (option) DVI-I + DP + VGA (option)
Super I/O	Nuvoton NCT6106D

BIOS	AMI/UEFI BIOS
Storage	2x SATA3.0 Connector (SATA1/SATA2) 1x MSATA Connector (M_SATA1)
Ethernet	4x PCIe GbE LAN by Intel 82574L
USB	4x USB 3.0/2.0 stack ports for external (USB3.0 : USB3-1/USB3-2/USB3-3/USB3-4) (USB2.0 : USB2-1/USB2-2/USB2-3/USB2-4) 2x USB 2.0 stack ports for external (USB_78) 3x USB 2.0 Pin header for MIO1 (USB11/USB12/USB13) 2x USB 3..0/2.0 Pin header for MIO2 (USB3.0:USB3-5/USB3-6, USB2.0:USB2-5/USB2-6) 1x USB 2.0 internal for M-PCIe1 (USB2-10) 1x USB 2.0 internal for M-PCIe2 (USB2-09) 1x USB 2.0 internal for M-SATA1 (USB2-14)
Serial	2x RS232/422/485 port, DB9 connector for external (COM1/COM2) Pin9 w/5V/12V/Ring select 2x RS232 port, DB9 connector for external (COM3/COM4) Pin9 w/5V/12V/Ring select 2x RS232/422/485 select header for internal MIO1 (COM5/COM6)
Digital I/O	8-bit digital I/O by Pin header 4-bit digital Input 4-bit digital Output
Battery	Support CR2477 Li battery by 2-pin header (1000mAh)
Audio	Support Audio via Realtek ALC269-VB HD audio codec Support Line-out, Line-in, MIC-in by JACK (AUDIO1) Support a stereo Class-D Speaker Amplifier with 2 watt per channel output power, by 1x4-pin header (SPK1)
Keyboard /Mouse	PS2 K/B and Mouse by 1x6Pin Wafer connector 1x PS/2 keyboard 1x PS/2 mouse
Expansion	1x PCI-express x4 extend by 4x20 pin socket (PCIE_4X) 2x mini-PCI-express slot (M-PCIE1/MPCIE2) 1x CRT 2x5 Pin Header (VGA1)
Power Management	1x 3-pin power input connector (Wide range DC+9V~36V) DC5V/12V output by 1x4 pin Connectors

Switches and LED Indicators	<ul style="list-style-type: none"> Power on/off switch by MIO1 and MIO2 Power LED status by MIO1 and MIO2 HDD LED status by MIO2 Reset switch by MIO1
External I/O port	<ul style="list-style-type: none"> 4x COM Ports (COM1/COM2/COM3/COM4) 4x USB 3.0 Ports (stack) 2x USB 2.0 Ports (stack) 4x RJ45 GbE LAN Ports 1x DVI-I interface 1x HDMI interface 1x Display Port 1x Audio Ports (Mic in,Line in,Line out)
SIM	1x SIM Socket
LPT	1x LPT Port by DF13-20P (LPT1)
Temperature	<ul style="list-style-type: none"> Operating: -20°C to 70°C Storage: -40°C to 85°C
Humidity	10% - 90%, non-condensing, operating
Power Consumption	12V/5.2A(Intel i5-6500TE 2.30 GHz Processor with 16GB DDR4/HDD)
EMI/EMS	Meet CE/FCC class A

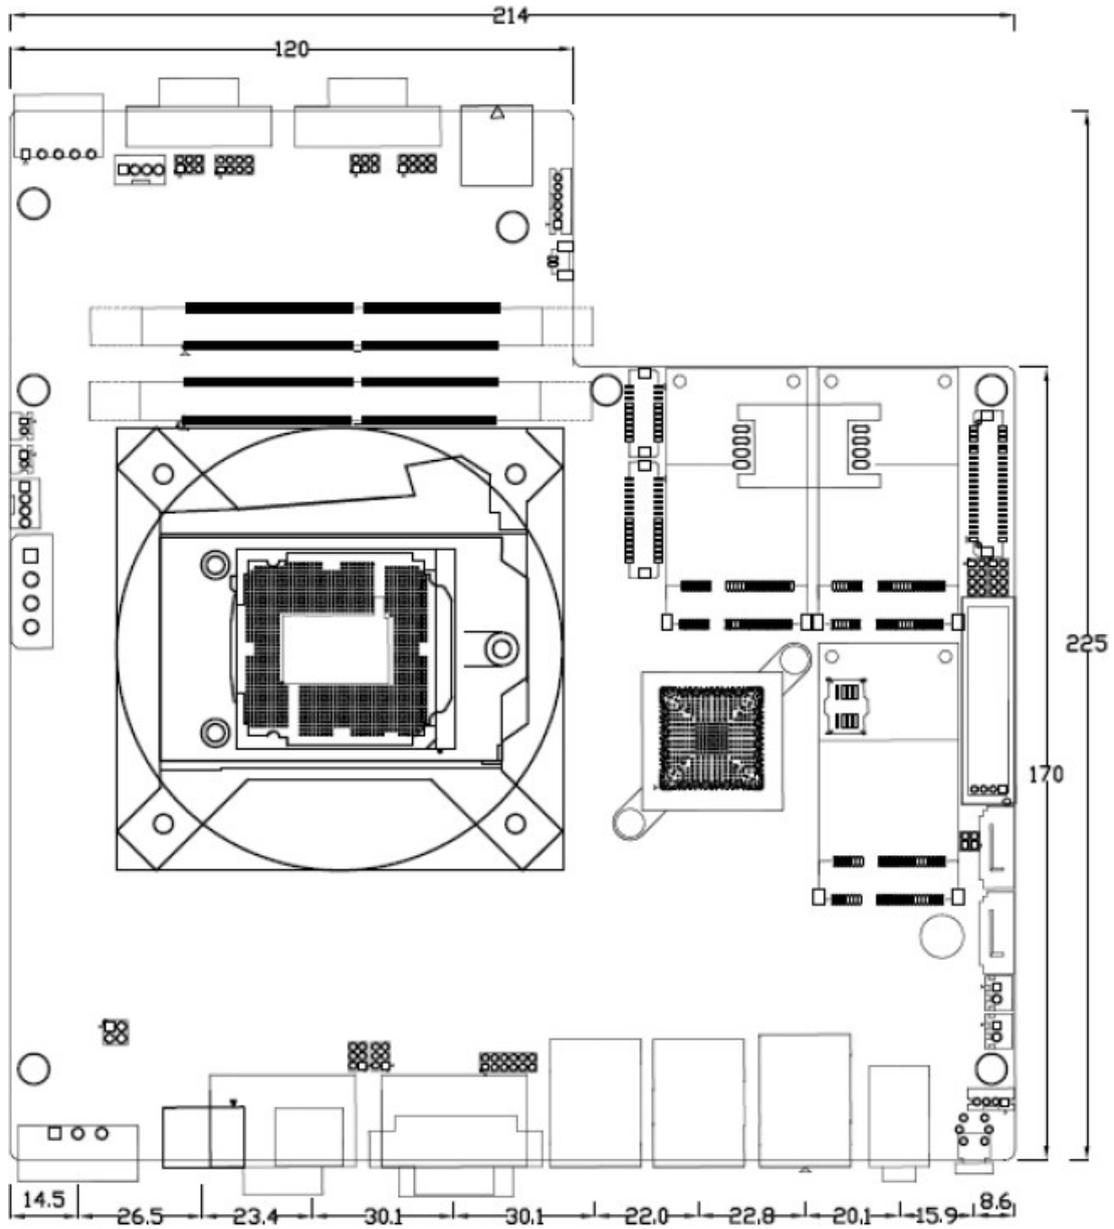

(units :mm)

Figure 2.1: Motherboard Dimensions

Board Bottom


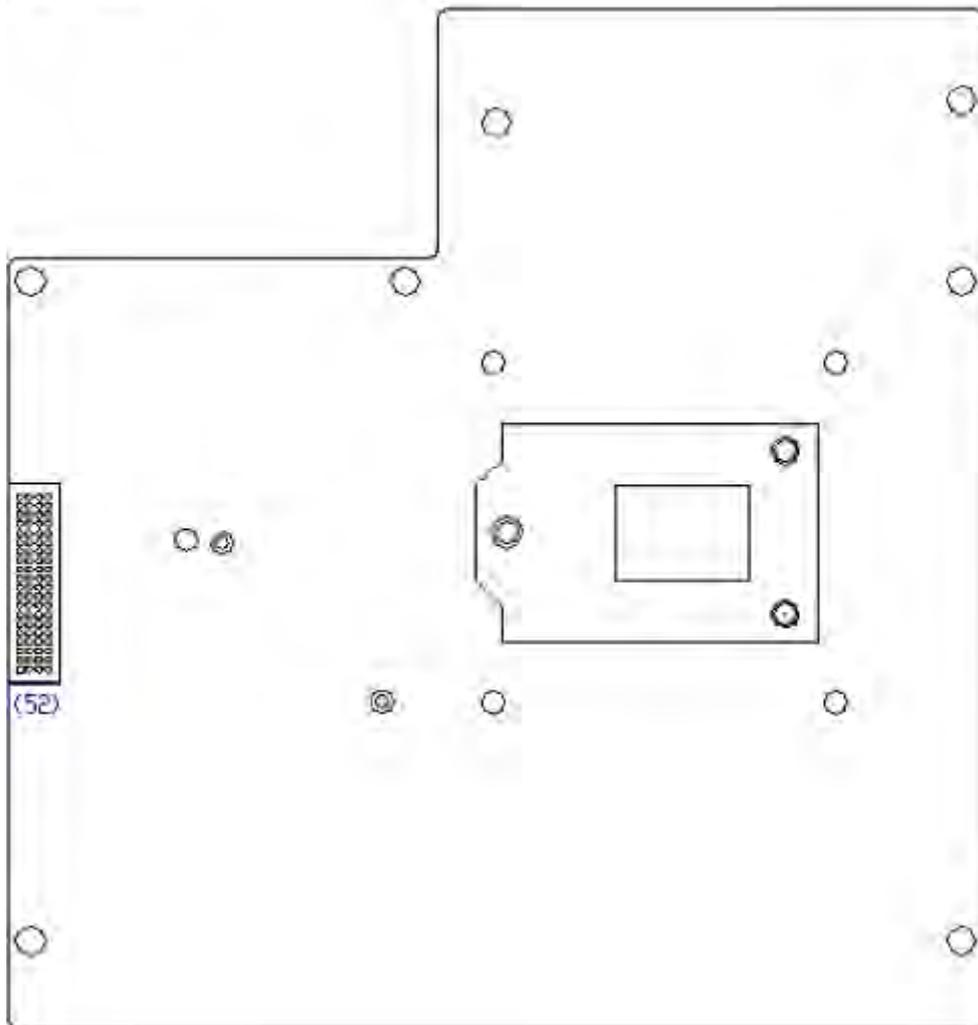


Figure 2.3: Jumpers and Connectors Location- Board Bottom

2.4 Jumpers Setting and Connectors

1. RTC1/SRTC1:

(2.0mm Pitch 1x2 Pin Header) CMOS clear jumper, CMOS clear operation will permanently reset old BIOS settings to factory defaults.

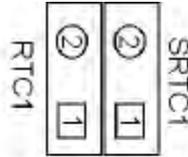

RTC1/SRTC1	CMOS
RTC1 Pin1-SRTC1 Pin1 close (or all open)	NORMAL (Default)
Close 1-2	Clear CMOS



Procedures of CMOS clear:

- Turn off the system and unplug the power cord from the power outlet.
- To clear the CMOS settings, use the jumper cap to close pins 1 and 2 for about 3 seconds then reinstall the jumper clip back to pins open.
- Power on the system again.
- When entering the POST screen, press the key to enter CMOS Setup Utility to load optimal defaults.
 - After the above operations, save changes and exit BIOS Setup.

2. BAT1 :

(1.25mm Pitch 1x2 wafer Pin Header) 3.0V Li battery is embedded to provide power for CMOS.

Pin#	Signal Name
Pin1	Ground
Pin2	VCC_RTC

3. PS_ON2:

(2.0mm Pitch 1x2 Wafer Pin Header), ATX Power and Auto Power on jumper setting.

PS_ON2	Mode
Open	ATX Power(Default)
Close 1-2	Auto Power on (option)

4. PS_ON1:

(2.0mm Pitch 1x2 Wafer Pin Header) , **Power on/off**, They are used to connect power switch

button. The two pins are disconnected under normal condition. You may short them temporarily to realize system startup & shutdown or awaken the system from sleep state.

5. PS_SW:

Power on/off button, They are used to connect power switch button.

Power LED Status. Green LED for Motherboard Power status.

Model	PS_ON1	PS_SW	Power LED
SBC-7113HB	●	●	●
SBC-7113HT	●	●	●

6. DC_IN1:

(5.08mm Pitch 1x3 Pin Connector),DC9V ~ DC36V System power input connector。



Pin#	Power Input (DC_IN1)
Pin1	DC+9V~36V
Pin2	Ground
Pin3	FG

DC_IN1(Power Input)	JP5
DC+9V~36V	NC (Default)
DC12V only (*)	Option (BOM cost down)


7. JP5 (option):

(2.0mm Pitch 2x2 Pin Pin Header), DC12V System only power **input** jumper setting.

[*please contact technical support]

8. DC_OUT:

(2x2 Pin Connector),DC+12V and DC+5V System power **output** connector.



Pin#	Power output
Pin1	DC+12V (DC12V_S0)
Pin2	Ground
Pin3	Ground
Pin4	DC+5V(DC5V_S0)



Note:

DC+5V Output current of the connector must not be above 0.5A.

DC+12V Output current of the connector must not be above 1A.

9. CPU1:


(LGA1151 Socket), installing the 6th Generation intel Core i3/i5/i7CPU Socket.

10. HS1/HS2/HS3/HS4(CPU SCREW HOLES):

CPU FAN SCREW HOLES, Four screw holes for fixed CPU Cooler assemble.

11. CPU_FAN1/SYS_FAN1:

(2.54mm Pitch 1x4 Pin Header), Fan connector, cooling fans can be connected directly for use. You may set the rotation condition of cooling fan in menu of BIOS CMOS Setup.

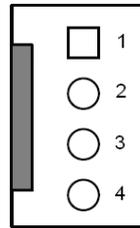

Pin#	Signal Name	CPU_FAN1	SYS_FAN1
1	Ground	●	●
2	VCC	●	●
3	CPU_FANTACH	●	●
4	CPU_FANPWM	○	●



Note:

Output power of cooling fan must be limited under 5W.

12. PCH1:

(BGA,Package Size:23x24mm),Intel H170 Chipset.

Model	PCH1 (Chipset)
SBC-7113HB	Intel H170
SBC-7113HT	Intel H170

13. H7/H8 (option):

PCH1 HeatSink Screw holes.


14. DDR4_1/DDR4_2:



(SO-DIMM 260Pin socket), DDR4 memory socket, the socket is located at the top of the board and supports 260Pin 1.2V DDR4 1866/2133MHz FSB SO-DIMM memory module up to 32GB.


15. HDMI1:

(HDMI 19P Connector), High Definition Multimedia Interface connector.



16. DVI-I:

(DVI-I Connector), Digital Visual Interface-Integrated connector.

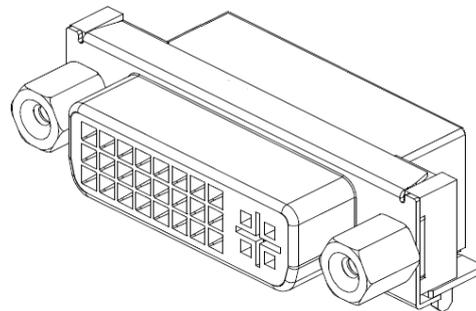

17. DP:

(DP Connector), Display Port Interface connector.



18. VGA1:

(CRT 2.0mm Pitch 2X6 Pin Header), Video Graphic Array Port, Provide 2x6Pin cable to VGA Port. The IT6515FN is a high-performance single-chip DisplayPort to VGA converter.

Signal Name	Pin#	Pin#	Signal Name
CRT_RED	1	2	Ground
CRT_GREEN	3	4	Ground
CRT_BLUE	5	6	CRT_SENSE
CRT_H_SYNC	7	8	CRT_DDCCDATA

CRT_V_SYNC	9	10	CRT_DDCCLK
Ground	11	12	Ground

19. JP1:

(2.0mm Pitch 2x3 Pin Header), COM1 jumper setting, pin 1~6 are used to select signal out of pin 9 of COM1 port.


JP1 Pin#	Function
Close 1-2	COM1 Pin9 RI (Ring Indicator) (default)
Close 3-4	COM1 Pin9 = +5V (option)
Close 5-6	COM1 Pin9 = +12V (option)

20. JP_C1(option):

(2.0mm Pitch 2x4 Pin Header), Reserve.

21. COM1:

(Type DB9), Rear serial port, standard DB9 Male serial port is provided to make a direct connection to serial devices.

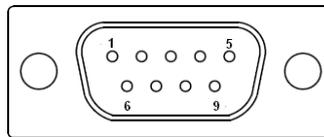

RS232 (Default):	
Pin#	Signal Name
1	DCD# (Data Carrier Detect)
2	RXD (Received Data)
3	TXD (Transmit Data)
4	DTR (Data Terminal Ready)
5	Ground
6	DSR (Data Set Ready)
7	RTS (Request To Send)
8	CTS (Clear To Send)
9	JP1 select Setting (RI/5V/12V)

RS422 (option):	
Pin#	Signal Name



1	422TX-
2	422TX+
3	422RX+
4	422RX-
5	Ground
6	NC
7	NC
8	NC
9	NC

RS485 (option):	
Pin#	Signal Name
1	485-
2	485+
3	NC
4	NC
5	Ground
6	NC
7	NC
8	NC
9	NC

BIOS/Serial Port 1 Configuration/F75111 COM1 Config:	
	[RS-232 Mode]
	[RS-485 Mode]
	[RS-422 Mode]

22. JP2:

(2.0mm Pitch 2x3 Pin Header), COM2 jumper setting, pin 1~6 are used to select signal out of pin 9 of COM2 port.


JP2 Pin#	Function
Close 1-2	COM2 Pin9 RI (Ring Indicator) (default)
Close 3-4	COM2 Pin9=+5V (option)
Close 5-6	COM2 Pin9=+12V (option)

23. JP_C2(option):

(2.0mm Pitch 2x4 Pin Header), Reserve.

24. COM2:

(Type DB9), Rear serial port, standard DB9 Male serial port is provided to make a direct connection to serial devices.

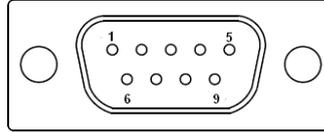

RS232 (Default):	
Pin#	Signal Name
1	DCD# (Data Carrier Detect)
2	RXD (Received Data)
3	TXD (Transmit Data)
4	DTR (Data Terminal Ready)
5	Ground
6	DSR (Data Set Ready)
7	RTS (Request To Send)
8	CTS (Clear To Send)
9	JP2 select Setting (RI/5V/12V)

RS422 (option):	
Pin#	Signal Name
1	422TX-
2	422TX+
3	422RX+
4	422RX-
5	Ground
6	NC
7	NC
8	NC
9	NC

RS485 (option):	
Pin#	Signal Name
1	485-

2	485+
3	NC
4	NC
5	Ground
6	NC
7	NC
8	NC
9	NC

BIOS/Serial Port 2 Configuration/F75111 COM2 Config:	
	[RS-232 Mode]
	[RS-485 Mode]
	[RS-422 Mode]


25. JP3:

(2.0mm Pitch 2x3 Pin Header), COM3 jumper setting, pin 1~6 are used to select signal out of pin 9 of COM3 port.

JP3 Pin#	Function
Close 1-2	COM3 Pin9 RI (Ring Indicator) (default)
Close 3-4	COM3 Pin9=+5V (option)
Close 5-6	COM32 Pin9=+12V (option)

26. COM3:

(Type DB9), Rear serial port, standard DB9 Male serial port is provided to make a direct connection to serial devices.

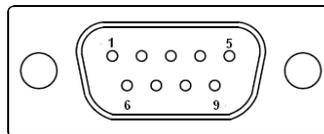

RS232 (Default):	
Pin#	Signal Name
1	DCD# (Data Carrier Detect)
2	RXD (Received Data)
3	TXD (Transmit Data)
4	DTR (Data Terminal Ready)

5	Ground
6	DSR (Data Set Ready)
7	RTS (Request To Send)
8	CTS (Clear To Send)
9	JP3 select Setting (RI/5V/12V)


27. JP4:

(2.0mm Pitch 2x3 Pin Header), COM4 jumper setting, pin 1~6 are used to select signal out of pin 9 of COM4 port.

JP4 Pin#	Function
Close 1-2	COM4 Pin9 RI (Ring Indicator) (default)
Close 3-4	COM4 Pin9=+5V (option)
Close 5-6	COM4 Pin9=+12V (option)

28. COM4:


(Type DB9), Rear serial port, standard DB9 Male serial port is provided to make a direct connection to serial devices.

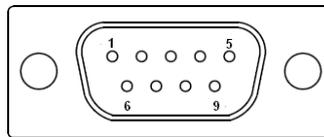

RS232 (Default):	
Pin#	Signal Name
1	DCD# (Data Carrier Detect)
2	RXD (Received Data)
3	TXD (Transmit Data)
4	DTR (Data Terminal Ready)
5	Ground
6	DSR (Data Set Ready)
7	RTS (Request To Send)
8	CTS (Clear To Send)
9	JP4 select Setting (RI/5V/12V)

29. USB3_LAN1/USB3_LAN2:


USB3-3/USB3-4/USB3-1/USB3-2 : (Double stack USB typeA), Rear USB connector, it provides up to 4 USB3.0 ports, USB 3.0 allows data transfers up to 5.0Gb/s, support USB2.0 and full-speed and low-speed signaling.

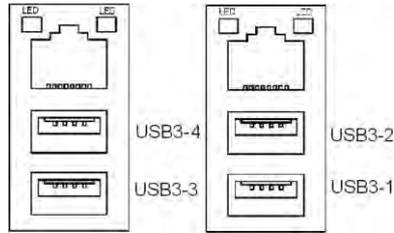

Each USB Type A Receptacle (2 Ports) Current limited value is 2.0A.

If the external USB device current exceeds 2.0A, please separate connectors into different Receptacle.


LAN1/LAN2: (RJ45 Connector), Rear LAN port, Two standard 10/100/1000M RJ-45 Ethernet ports are provided. Used Intel 82574L chipset.

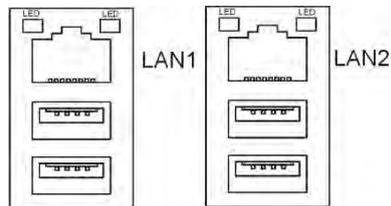

LAN LED: There's no light will on while using 10/100M LAN. The green light will on while using Gbe LAN

30. LAN34:


LAN3/LAN4: (RJ45 Connector), Rear LAN port, Two standard 10/100/1000M RJ-45 Ethernet ports are provided. Used Intel 82574L chipset.

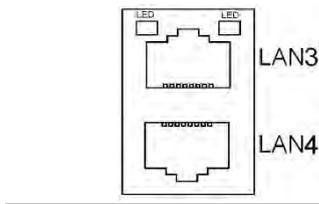

LAN LED: There's no light will on while using 10/100M LAN. The green light will on while using Gbe LAN

31. USB78:

USB5/USB6 : (Double stack USB type A), Rear USB connector, it provides up to 2 USB2.0 ports, High-speed USB 2.0 allows data transfers up to 480 Mb/s ,support USB full-speed and low-speed signaling.

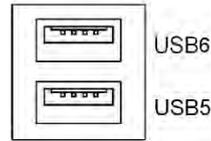


Each USB Type A Receptacle (2 Ports) Current limited value is 1.5A.

If the external USB device current exceeds 1.5A, please separate connectors into different Receptacle.

32. AUDIO1:

(Diameter 3.5mm Three stack Jack), High Definition Audio port, An onboard Realtek ALC269-VB codec is used to provide high quality audio I/O ports.

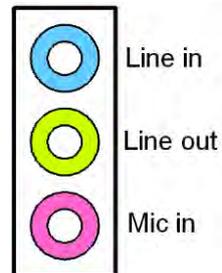

33. SPK1:

(2.0mm Pitch 1x4 Wafer Pin Header), support a stereo Class-D Speaker Amplifier with 2 watt per channel output power

Pin#	Signal Name
1	SPK_OUTR_P
2	SPK_OUTR_N
3	SPK_OUTL_N
4	SPK_OUTL_P

34. SATA_P1/SATA_P2:

(2.5mm Pitch 1x2 Wafer Pin Header), Two onboard 5V output connectors are reserved to provide power for SATA devices.

Pin#	Signal Name
1	+DC5V_S0
2	Ground



Note:

Output current of the connector must not be above 1A.



35. SATA1/SATA2:

(SATA 7P), SATA Connectors, Two SATA connectors are provided, SATA1 and SATA2 transfer speed up to 6.0Gb/s.

RAID controller supporting RAID0 or RAID1.

36. M_SATA1:

(50.95mmx30mm Socket 52Pin), mSATA socket, it is located at the top, it supports mini PCIe devices with USB2.0 and SMBUS and mSATA signal. **B2 mSATA bus** for flash disk signal.

37. H1/H2:

M_SATA1 SCREW HOLES.

H1 and H2 for mini MSATA card (50.95mmx30mm Socket 52 Pin) assemble.

38. M-PCIE1:

(Socket 52Pin), mini PCIe socket, it is located at the top, it supports mini PCIe devices with USB2.0 and SIM and SMBUS and PCIe signal. MPCIE card size is 30 x 50.95mm.

39. H3/H4:

M-PCIE1 SCREW HOLES, H3 and H4 for mini PCIE card (30mmx50.95mm) assemble.

40. SIM1:

(SIM Socket 6Pin), Support SIM Card devices.

41. M-PCIE2:

(Socket 52Pin), mini PCIe socket, it is located at the top, it supports mini PCIe devices with USB2.0 and LPC and SMBUS and PCIe signal. MPCIE card size is 30 x 50.95mm.

42. H5/H6:

M-PCIE2 SCREW HOLES, H5 and H6 for mini PCIE card (30mmx50.95mm) assemble.

43. BUZZER1:

Onboard buzzer.

44. PS2:


(2.0mm Pitch 1x6 Wafer Pin Header), PS/2 keyboard and mouse port, the port can be connected to PS/2 keyboard and mouse, via a dedicated cable for direct used.

Pin#	Signal Name
------	-------------

1	KBDATA
2	MSDATA
3	Ground
4	+5V
5	KBCLK
6	MSCLK

45. GPIO:

(3.5mm Pitch 2x5 Pin Connector), General-purpose input/output port, it provides a group of self-programming interfaces to customers for flexible use.

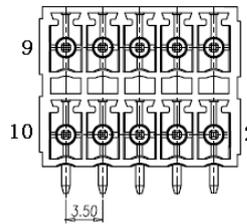

Signal Name	Function	Pin#		Function	Signal Name
+5V_S5	5V Power	1	2	Ground	Ground
FT_GPIO_27	GPIO_IN1	3	4	GPIO_IN2	FT_GPIO_26
FT_GPIO_25	GPIO_IN3	5	6	GPIO_IN4	FT_GPIO_24
FT_GPIO_23	GPIO_OUT1	7	8	GPIO_OUT2	FT_GPIO_22
FT_GPIO_21	GPIO_OUT3	9	10	GPIO_OUT4	FT_GPIO_20

46. LPT :

(DF13-20P Connector), For expand output connector, a standard 20 pin parallel port is provided to connect parallel peripherals as required.

Signal Name	Pin#		Signal Name
Ground	2	1	Ground
LPT_AFD-	4	3	LPT_STB-
LPT_ERR-	6	5	LPT_D0
LPT_INIT-	8	7	LPT_D1
LPT_SLIN-	10	9	LPT_D2
LPT_D4	12	11	LPT_D3
LPT_D6	14	13	LPT_D5
LPT_ACK-	16	15	LPT_D7



LPT_PE	18	17	LPT_BUSY
+5V_S0	20	19	LPT_SLCT

47. LED1/LED2/LED4:

LED1 STATUS. Green LED for Motherboard Power status.

LED2 STATUS. Green LED for Motherboard Standby Power Good status.

LED4 STATUS. Green LED for CPU Power status.

48. JP_C5(option):

(2.0mm Pitch 2x4 Pin Header), Reserve.

49. JP_C6(option):

(2.0mm Pitch 2x4 Pin Header), Reserve.

50. MIO1:

(DF13-40P Connector), For expand output connector, It provides two RS232 or RS422 or RS485 ports, three USB ports, one power led, one power button, via a dedicated cable connected to board.

Function	Signal Name	Pin#		Signal Name	Function
	Ground	2	1	Ground	
COM5 : RS232 or 422 or 485	RXD5 422TX+ 485+	4	3	DCD5- 422TX- 485-	COM5 : RS232 or 422 or 485
COM5 : RS232 or 422	DTR5- 422RX-	6	5	TXD5 422RX+	COM5 : RS232 or 422
COM5 : RS232	DSR5-	8	7	RTS5-	COM5 : RS232
COM5 : RS232	CTS5-	10	9	RI5-	COM5 : RS232
	Ground	12	11	Ground	
COM6 : RS232 or 422 or 485	RXD6 422TX+ 485+	14	13	DCD6- 422TX- 485-	COM6 : RS232 or 422 or 485
COM6 : RS232 or 422	DTR6- 422RX-	16	15	TXD6 422RX+	COM6 : RS232 or 422
COM6 : RS232	DSR6-	18	17	RTS6-	COM6 : RS232
COM6 : RS232	CTS6-	20	19	RI6-	COM6 : RS232
USB_5V	5V_USB1112	22	21	5V_USB1112	USB_5V



USB_5V	5V_USB1112	24	23	5V_USB1112	USB_5V
USB2.0 (USB11)	USB11_N	26	25	USB12_N	USB2.0 (USB12)
	USB11_P	28	27	USB12_P	
	Ground	30	29	Ground	
Power LED	PWRLED+	32	31	USB13_N	USB2.0 (USB13)
	PWRLED-	34	33	USB13_P	
Power Auto on	AUTO_PSON-	36	35	Ground	
Power Button	MIO_PSON-	38	37	Ground	
	Ground	40	39	FP_RESET-	Reset

BIOS/Serial Port 5 Configuration/F75111 COM5 Config:	
	[RS-232 Mode]
	[RS-485 Mode]
	[RS-422 Mode]
BIOS/Serial Port 6 Configuration/F75111 COM6 Config:	
	[RS-232 Mode]
	[RS-485 Mode]
	[RS-422 Mode]

51. MIO2:

(DF13-30P Connector),Front panel connector.

Function	Signal Name	Pin#		Signal Name	Function
USB3.0/USB2.0	5V_USB0506	2	1	5V_USB0506	USB3.0/USB2.0
	5V_USB0506	4	3	5V_USB0506	
	5V_USB0506	6	5	5V_USB0506	
	USB8_N	8	7	USB7_N	
	USB8_P	10	9	USB7_P	
	Ground	12	11	Ground	
	USB3_RX5_N	14	13	USB3_RX6_N	
	USB3_RX5_P	16	15	USB3_RX6_P	
	Ground	18	17	Ground	
	USB3_TX5_N	20	19	USB3_TX6_N	
	USB3_TX5_P	22	21	USB3_TX6_P	
HDD LED	Ground	24	23	Ground	Power LED
	HDD_LED	26	25	ALL_PWR_LED-	
Power Button	MIO_PSON-	28	27	BUZZER+	BUZZER



	Ground	30	29	BUZZER-	
--	--------	----	----	---------	--

Pin24-Pin26: **HDD LED**, They are used to connect hard disk activity LED. The LED blinks when the hard disk is reading or writing data.

Pin23- Pin25: **POWER LED**, They are used to connect power LED. When the system is powered on or under S0/S1 state, the LED is normally on, when the system is under S4/S5 state, the LED is off.

Pin28- Pin30: **POWER on/off Button**, They are used to connect power switch button. The two pins are disconnected under normal condition. You may short them temporarily to realize system startup & shutdown or awaken the system from sleep state.

Pin27- Pin29: **BUZZER**, They are used to connect an external buzzer.

Pin01~Pin22: **USB3-5/USB3-6/USB2-7/USB2-8**,Front USB connector,it provides two USB3.0/USB2.0 ports via a dedicated USB cable.

Each USB Type A Receptacle (2 Ports) Current limited value is 2.0A. If the external USB device current exceeds 2.0A, please separate connectors into different Receptacle.



Note:

When connecting LEDs and buzzer and USB, pay special attention to the signal polarity. Make sure that the connector pins have a one-to-one correspondence with chassis wiring, or it may cause boot up failure.

52. PCIE_4X(option):


(4x20 Pin connector), Riser Card expansion connector. Can expand support one PCIeX4 or four PCIeX1 Signal.

SBC-7113HT : PCIE_4X connector in the top.

SBC-7113HB : PCIE_4X connector in the Bottom.


MODEL	PCIE_4X
SBC-7113HT	Top
SBC-7113HB	Bottom

Riser Card	Function	SBC-7113HB	SBC-7113HT

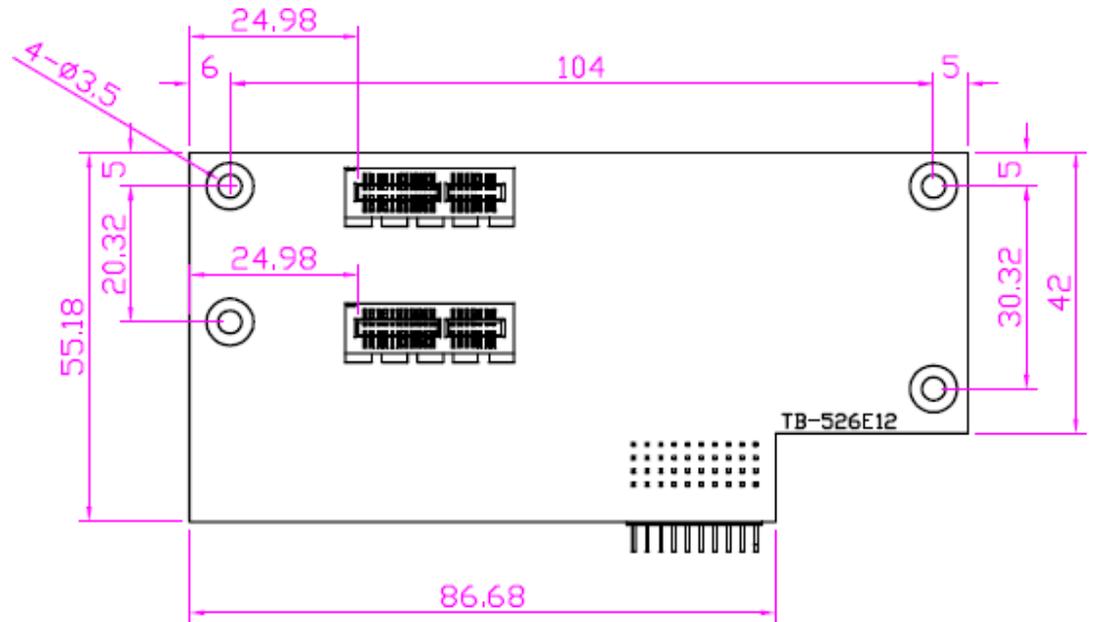


57. TB-526P1:

TB-526P1 connect to SBC-7113HB PCIE_4X connector, PCIE_4X is located at the Bottom, It provides one PCI slot.

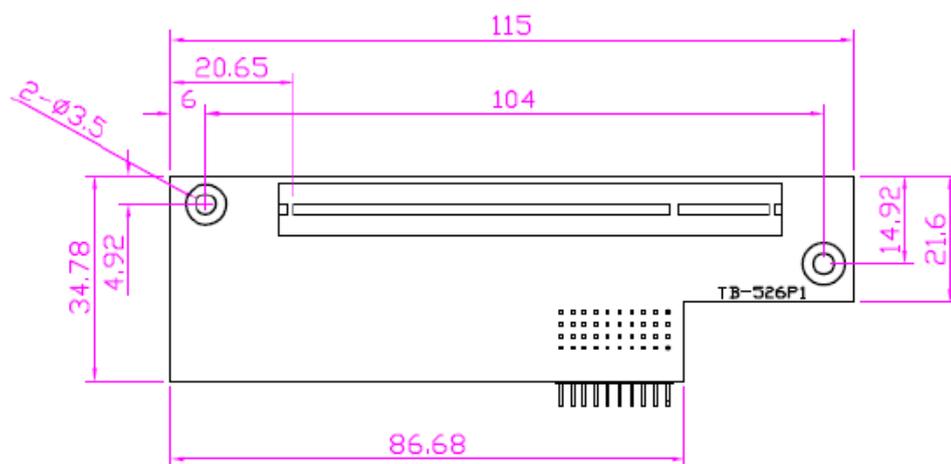


58. TB-526P2:

TB-526P2 connect to SBC-7113HB PCIE_4X connector, PCIE_4X is located at the Bottom, It provides two PCI slot.

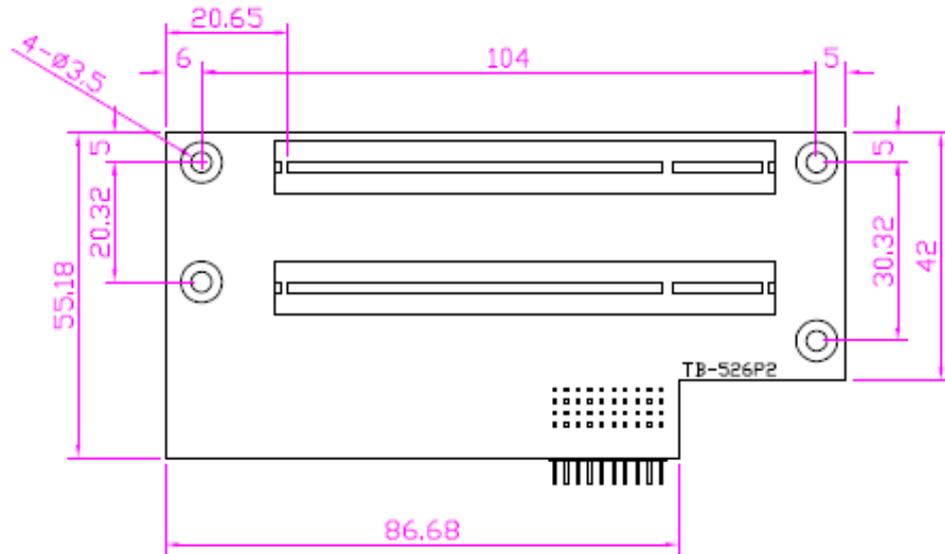


59. TB-525E11:

TB-525E11 connect to SBC-7113HT PCIE_4X connector, PCIE_4X is located at the top, It provides one PCIE X1 slot.

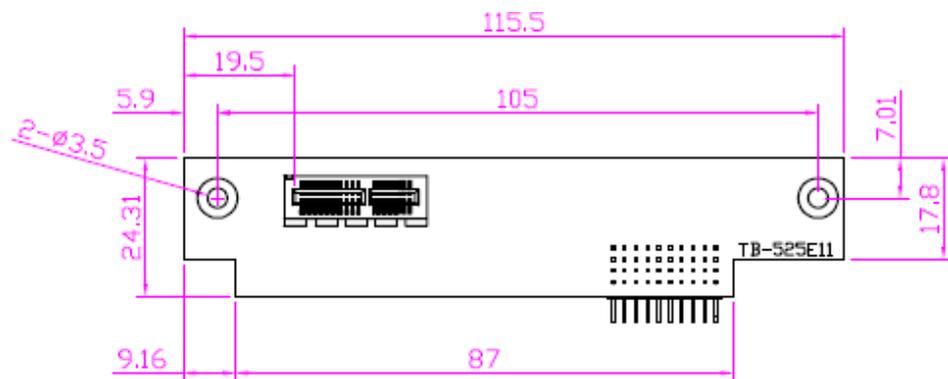


60. TB-525E12:

TB-525E12 connect to SBC-7113HT PCIE_4X connector, PCIE_4X is located at the top, It provides two PCIE X1 slot.

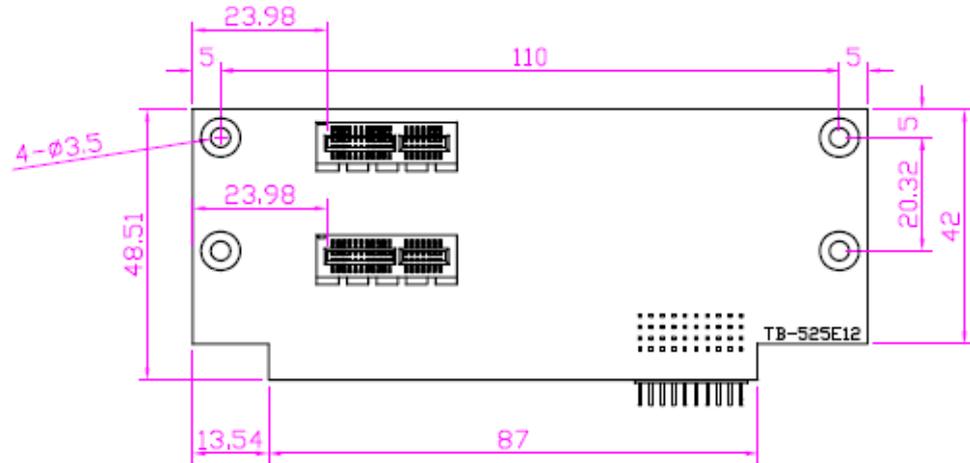

61. TB-525P1:

TB-525P1 connect to SBC-7113HT PCIE_4X connector, PCIE_4X is located at the top, It provides one PCI slot.

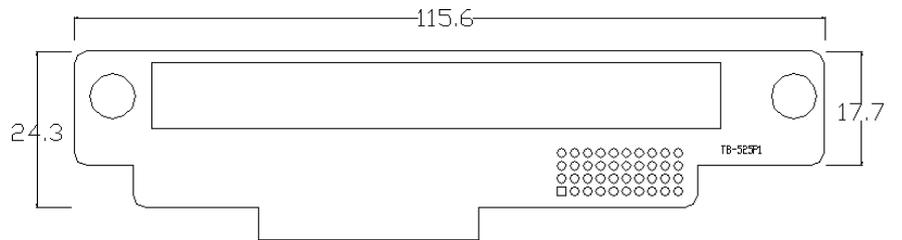




Chapter 3

BIOS Setup

3.1 Operations after POST Screen

After CMOS discharge or BIOS flashing operation, Press [Delete] key to enter CMOS Setup.

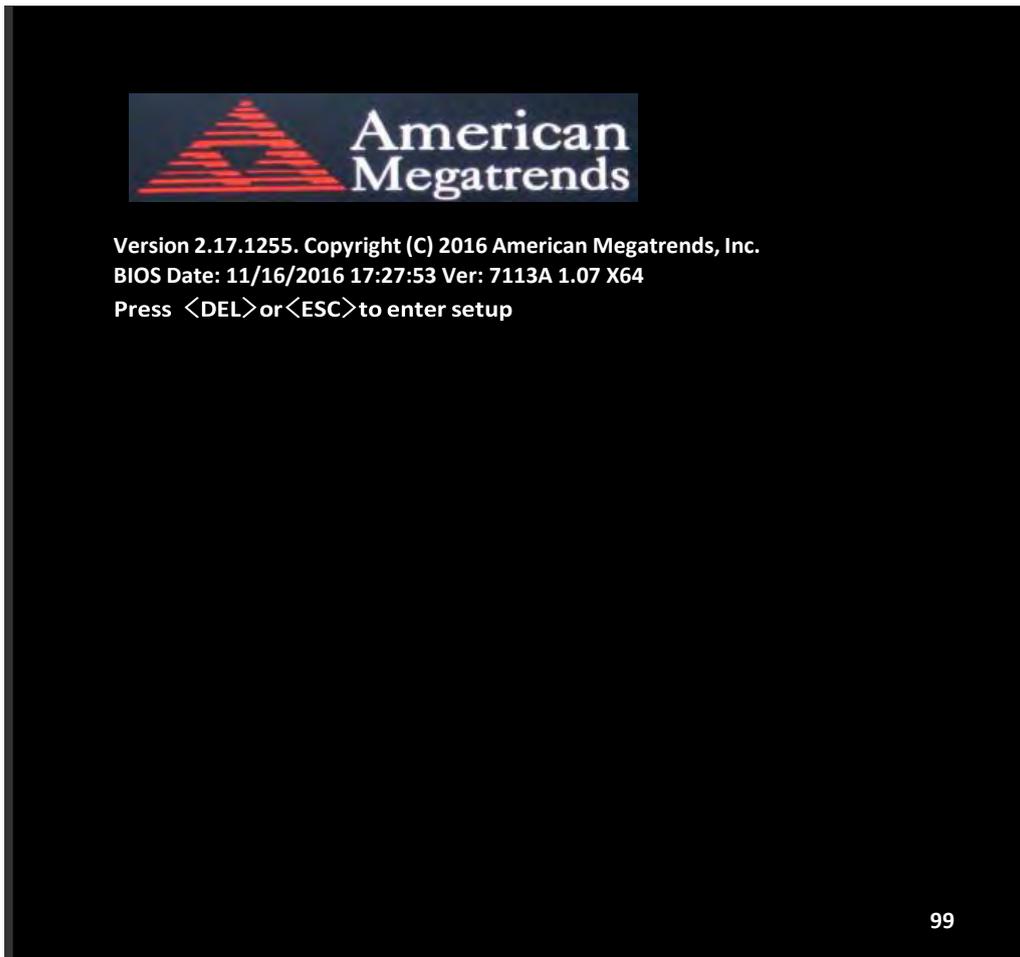


After optimizing and exiting CMOS Setup

3.2 BIOS SETUP UTILITY

Press [Delete] key to enter BIOS Setup utility during POST, and then a main menu containing system summary information will appear.



3.3 MAIN SETTING

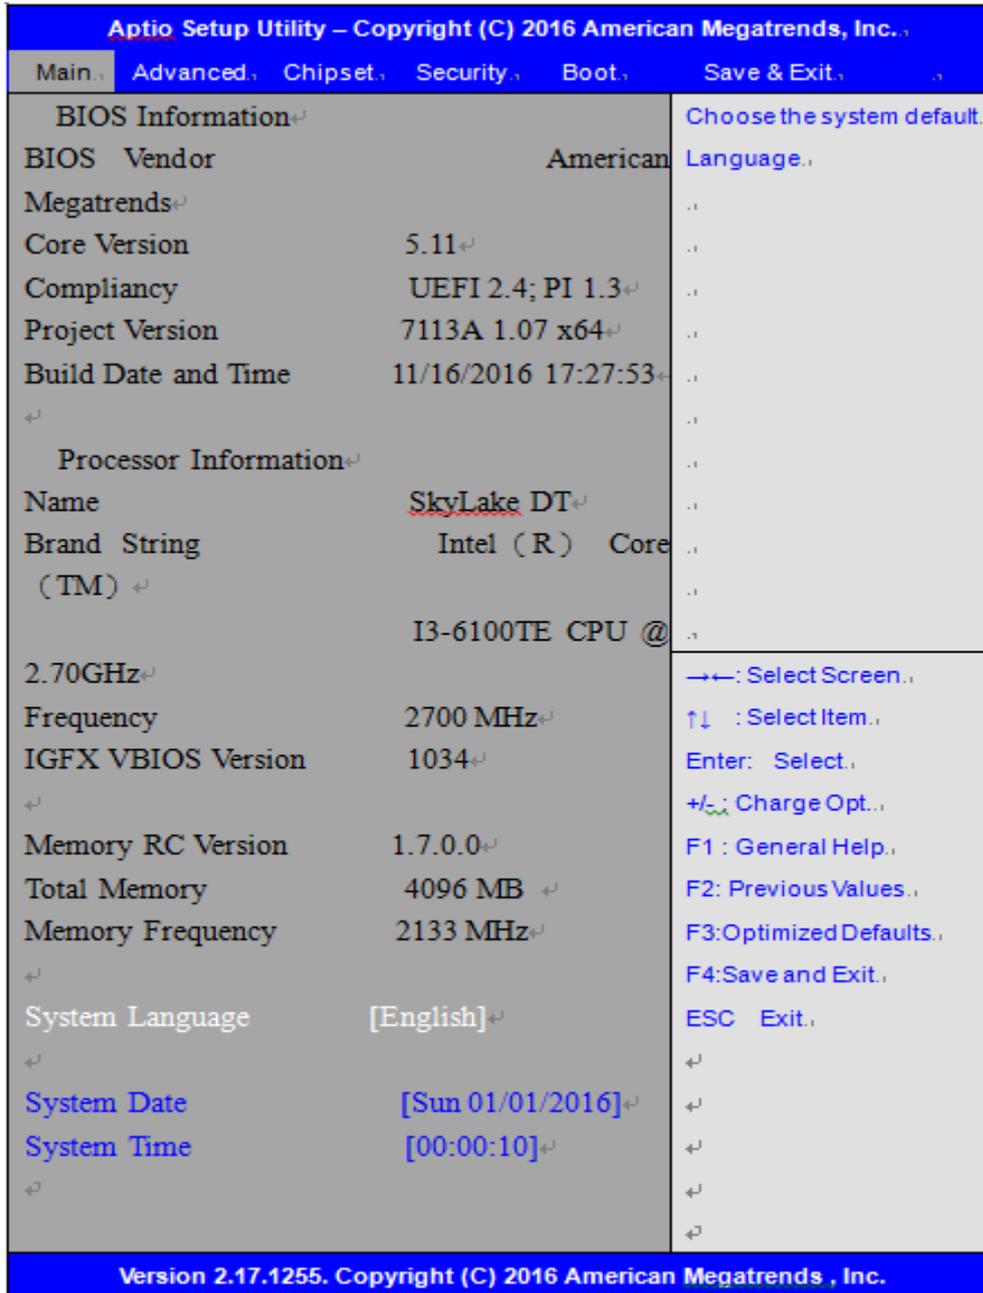

System Time:

Set the system time, the time format is:

Hour : 0 to 23

Minute : 0 to 59

Second : 0 to 59

System Date:


Set the system date, the date format is:

Day: Note that the 'Day' automatically changes when you set the date.



Month: 01 to 12
Date: 01 to 31
Year: 1998 to 2099

3.4 Advanced Settings

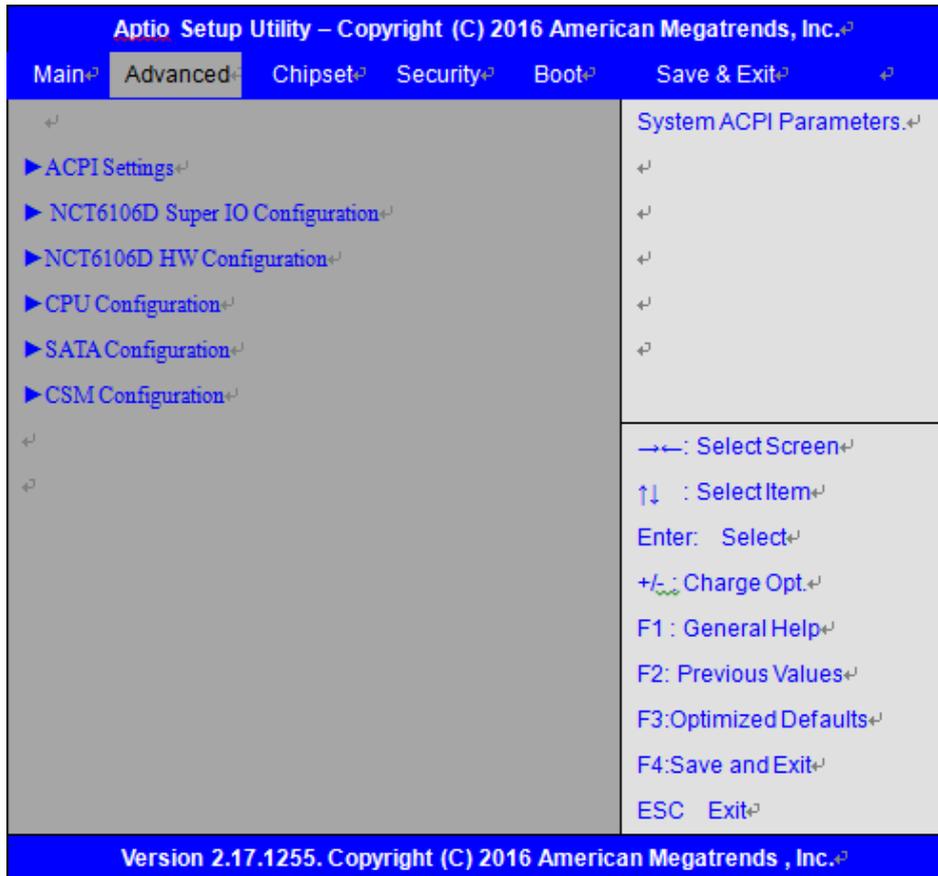

3.4.1 ACPI Settings

Enable ACPI Auto Conf:

[Disabled]

[Enabled]

Enable Hibernation:

[Enabled]

[Disabled]

ACPI Sleep State:

[S3 (Suspend to RAM)]

[Suspend Disabled]

Lock Legacy Resources:

[Disabled]



[Enabled]

S3 Video Repost:

[Disabled]

[Enabled]

ACPI Low Power S0 Idle:

[Disabled]

[Enabled]

3.4.2 NCT6106D Super IO Configuration

Super IO Chip	NCT6106D
Serial Port 1 Configuration	
Serial port	[Enabled]
	[Disabled]
Device Settings	IO=3F8h ; IRQ=4 ;
Change Settings	[Auto]
F75111 COM1 Config	[RS-232 Mode]
	[RS-485 Mode]
	[RS-422 Mode]
Serial Port 2 Configuration	
Serial port	[Enabled]
	[Disabled]
Device Settings	IO=2F8h ; IRQ=3 ;
Change Settings	[Auto]
F75111 COM2 Config	[RS-232 Mode]
	[RS-485 Mode]
	[RS-422 Mode]
Serial Port 3 Configuration	
Serial port	[Enabled]
	[Disabled]
Device Settings	IO=3E8h ; IRQ=7 ;
Change Settings	[Auto]
Serial Port 4 Configuration	



Serial port	[Enabled] [Disabled]
Device Settings	IO=3E8h ; IRQ=7 ;
Change Settings	[Auto]
Serial Port 5 Configuration	
Serial port	[Enabled] [Disabled]
Device Settings	IO=2F0h ; IRQ=7 ;
Change Settings	[Auto]
F75111 COM5 Config	[RS-232 Mode] [RS-485 Mode] [RS-422 Mode]
Serial Port 6 Configuration	
Serial port	[Enabled] [Disabled]
Device Settings	IO=2E0h ; IRQ=7 ;
Change Settings	[Auto]
F75111 COM6 Config	[RS-232 Mode] [RS-485 Mode] [RS-422 Mode]
Power Failure	[Power OFF] [Power ON] [Last state]
Parallel Port Configuration	
Parallel port	[Enabled] [Disabled]
Device Settings	IO=378h ; IRQ=5 ;
Change Settings	[Auto]
Device Mode	[STD Printer Mode]

3.4.3 NCT6106D HW Monitor



Pc Health Status

CPU Temperature	: +32 C
CPU Fan Speed	: N/A
VCORE	: +1.024 V
12V	: +12.055V
5V	: +5.200V
1.5V	: +1.536V

3.4.4 CPU Configuration

Intel(R) Core(TM) i3-6100TE CPU @ 2.70GHz	
CPU Signature	506E3
Microcode Patch	49
Max CPU Speed	2700 MHz
Mix CPU Speed	800MHz
CPU Speed	2700 MHz
Processor Cores	2
Hyper Threading Technology	Supported
Intel VT-X Technology	Supported
Intel SMX Technology	Not Supported
64-bit	Supported
EIST Technology	Supported
CPU C3 state	Supported
CPU C6 state	Supported
CPU C7 state	Supported
CPU C8 state	Supported
CPU C9 state	Supported
CPU C10 state	Supported
L1 Data Cache	32KB x 4
L1 Code Cache	32KB x 4
L2 Cache	256 KB x 2
L3 Cache	4 MB
L4 Cache	Not Present

3.4.5 SATA Configuration

SATA Controller (S)

[Enabled]

[Disabled]

SATA Mode



	[AHCI]
	[RAID]
SATA Test Mode	[Disabled]
	[Enabled]
Software Feature Mask SATA Controller	
Aggressive LPM Support	[Enabled]
[Disabled]	

3.4.6 CSM Configuration

CSM Support	[Enabled]
CSM16 Module Version	07.79
GateA20 Active	[Upon Request]
	[Always]
Option ROM Messages	[Force BIOS]
	[Keep Current]
INT19 Trap Response	[Immediate]
Boot option filter	[UEFI and Legacy]
	[Legacy only]
	[UEFI only]
Network	[Do not launch]
	[UEFI]
	[Legacy]
Storage	[UEFI]
	[Do not launch]
	[Legacy]
Video	[Legacy]
	[UEFI]
	[Do not launch]
Other PCI devices	[UEFI]
	[Do not launch]
	[Legacy]



3.5 Chipset Settings



3.5.1 System Agent (SA) Configuration

System Agent Bridge Name	Skylake
SA PCIe Code Version	1.7.0.0
VT-d	Supported

► Graphics Configuration

► Memory Configuration

Graphics Configuration

IGFX VBIOS Version	1034
Graphics Turbo IMON Current	31

► LCD Control

Primary IGFX Boot Display	[VBIOS Default]
	[DP]
	[CRT]
	[DVI]
	[HDMI]



Active CRT

[No CRT]

[CRT]

Memory Information

Memory RC Version	1.7.0.0
Memory Frequency	2133 MHz
Total Memory	4096 MB(DDR4)
VDD	1200
DIMM#0	4096 MB
DIMM#1	Not Present

3.6 Security Settings

Aptio Setup Utility – Copyright (C) 2016 American Megatrends, Inc.

Main Advanced Chipset **Security** Boot Save & Exit

Password Description

Set Administrator Password

If ONLY the Administrator's password is set, Then this only limits access to Setup and is Only asked for when entering Setup.

If ONLY the User's password is set, then this Is a power on password and must be entered to Is a power on password and must be entered to Boot or enter Setup. In Setup the User will Have Administrator rights.

The password length must be In the following range:

Minimum length	3
Maximum length	20

Administrator Password

User Password

► Secure Boot menu

→←: Select Screen
 ↑↓ : Select Item
 Enter: Select
 +/: Charge Opt.
 F1 : General Help
 F2: Previous Values
 F3:Optimized Defaults
 F4:Save and Exit
 ESC Exit

Version 2.17.1255. Copyright (C) 2016 American Megatrends, Inc.



3.6.1 Administrator Password



3.6.2 User Password



Type the password with up to 20 characters and then press **<Enter>** key. This will clear all previously typed CMOS passwords. You will be requested to confirm the password. Type the password again and press **<Enter>** key. You may press **<Esc>** key to abandon password entry operation.


To clear the password, just press **<Enter>** key when password input window pops up. A confirmation message will be shown on the screen as to whether the password will be disabled. You will have direct access to BIOS setup without typing any password after system reboot once the password is disabled.

Once the password feature is used, you will be requested to type the password each time you enter BIOS setup. This will prevent unauthorized persons from changing your system configurations.

Also, the feature is capable of requesting users to enter the password prior to system boot to control unauthorized access to your computer. Users may enable the feature in Security Option of Advanced BIOS Features. If Security Option is set to System, you will be requested to enter the password before system boot and when entering BIOS setup; if Security Option is set to Setup, you will be requested for password for entering BIOS setup.



3.7 Boot Settings

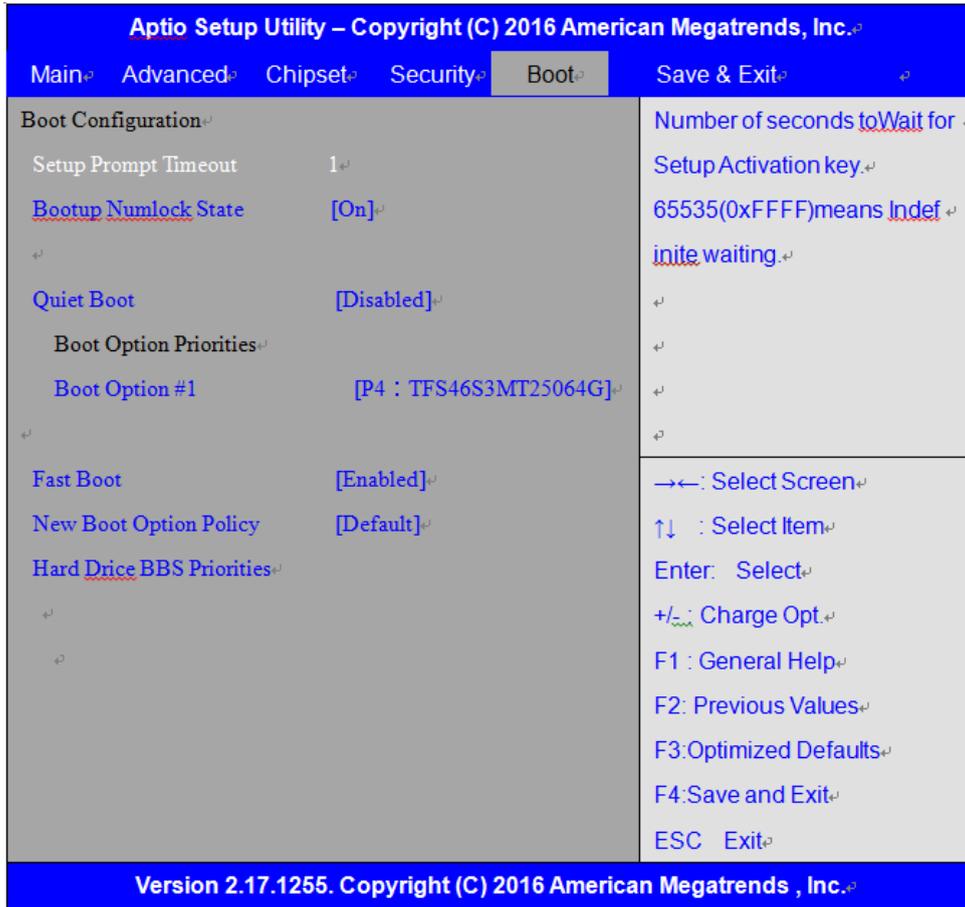


Setup Prompt Timeout	[1]
Bootup Numlock State	[On] [off]
Quiet Boot	[Disabled] [Enabled]
Boot Option Priorities	
Boot Option #1	
Sets the system boot order	
Hard Drive BBS Priorities	[P4 : TFS46S3MT25064G] Disabled



Fast Boot	[Disabled] [Enabled]
New Boot Option Policy	[Default] [Place First] [Place Last]
Hard Drive BBS Priorities	

3.8 Save & Exit Settings

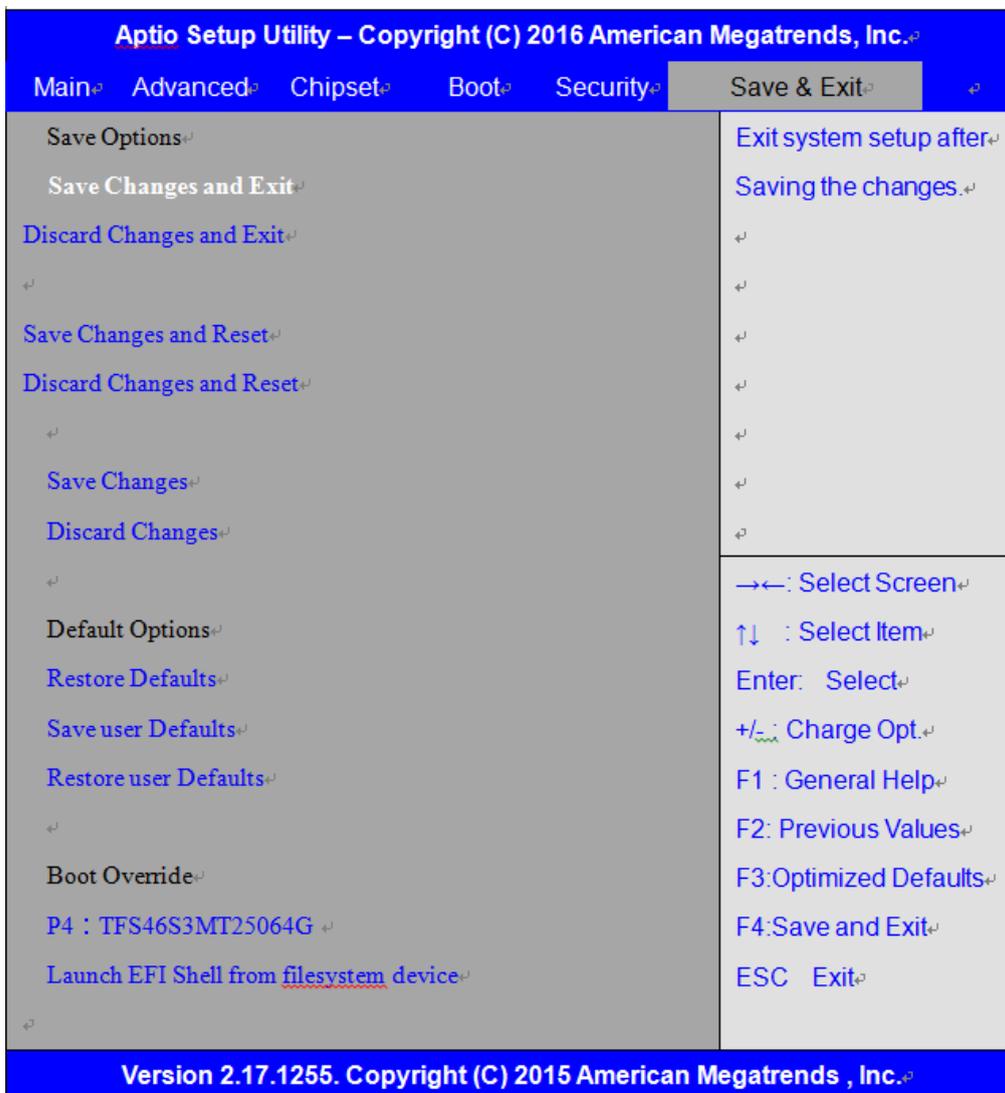

Save Changes and Exit

Save & Exit Setup save Configuration and exit ?

[Yes]

[No]



Discard Changes and Ext

Exit Without Saving Quit without saving?

[Yes]

[No]

Save Changes and Reset

Reset the system after Saving The changes?

[Yes]

[No]

Discard Changes and Reset

Reset system setup without Saving any changes?

[Yes]

[No]

Save Changes

Save Setup done so far to any of the setup options?

[Yes]

[No]

Discard Changes

Discard Changes done so far to any of the setup options?

[Yes]

[No]

Restore Defaults

Restore /Load Defaults values for all the setup options?

[Yes]

[No]

Save as user Defaults

Save the changes done so far as User Defaults?

[Yes]

[No]

Restore user Defaults

Restore the User Defaults to all the setup options?

[Yes]

[No]

Boot Override P4 :

TFS46S3MT25064G

Launch EFI Shell from filesystem device

WARNING Not Found

[ok]

Chapter 4 Installation of Drivers

This chapter describes the installation procedures for software and drivers under the windows Embedded 8.1 and Windows 10 IOT. The software and drivers are included with the motherboard. The contents include **Intel(R) 100 series chipset driver, Intel(R) HD Graphics 530 chipset driver, Realtek ALC269 HD Audio Driver, and other Driver. Installation instructions are given below.**

Important Note:

After installing your Windows operating system, you must install first the Intel Chipset Software Installation Utility before proceeding with the installation of drivers.



4.1 Intel(R) 100 Series Chipset Driver

To install the Intel chipset driver, please follow the steps below.

Step 1. Select 4.1 Intel(R) 100 Series Chipset from the list




Step 2. Click **Next** to setup program.






Step 3. Read the license agreement. Click **Accept** to accept all of the terms of the license agreement.

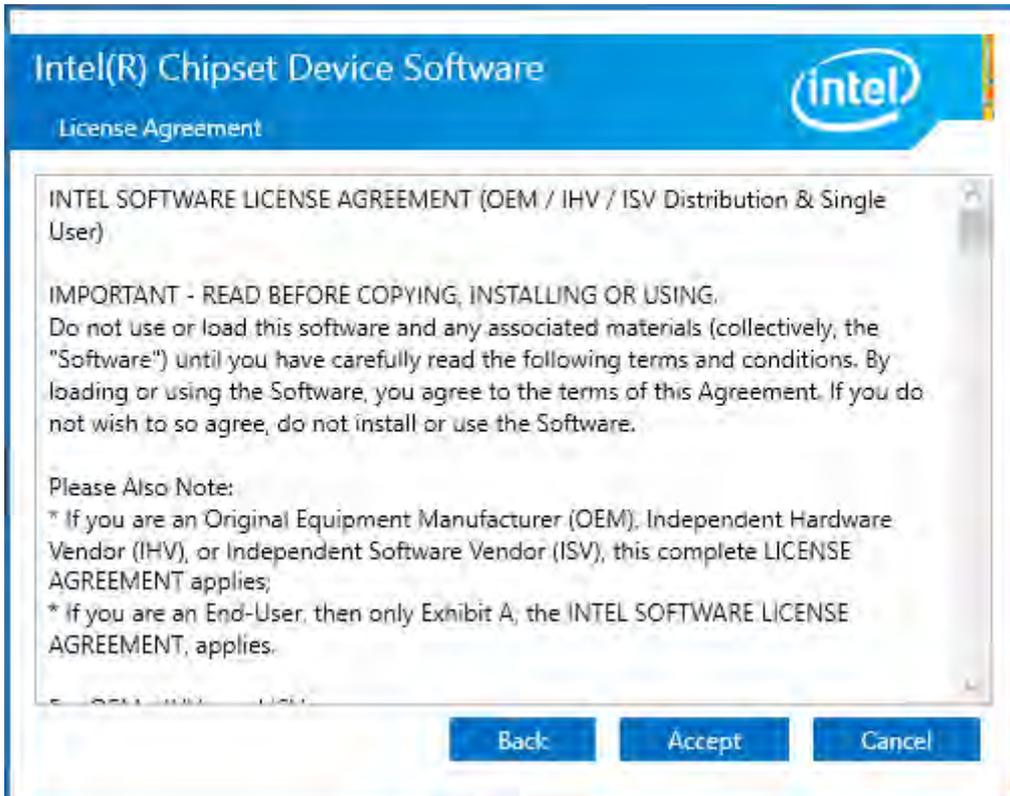

Step 4. Click **Install** to begin the installation.

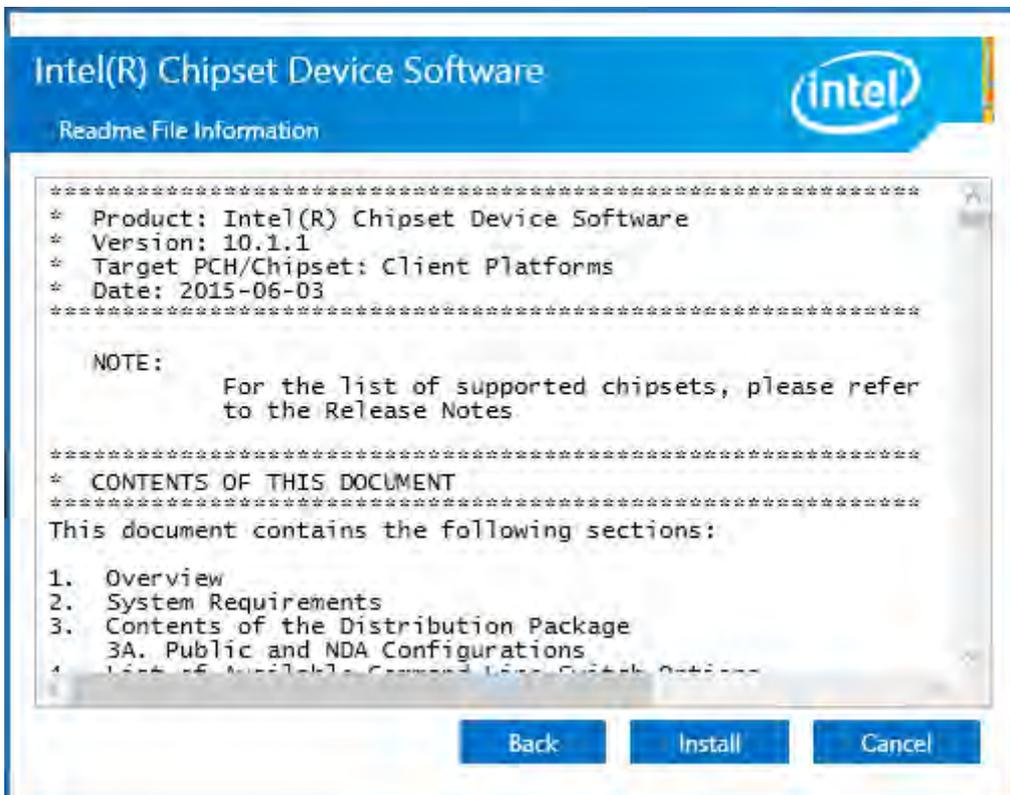

Step 5. Click **Restart Now** to complete the setup process. You must restart the computer which has been installed for the changes to take effects.




4.2 Intel(R) HD Graphics 530 Chipset Driver

To install the HD Graphics 530 Chipset drivers, follow the steps below to proceed with the installation.

Step 1. Select Intel(R) HD Graphics 530 Chipset from the list.



Step 2. Click Next to setup program.

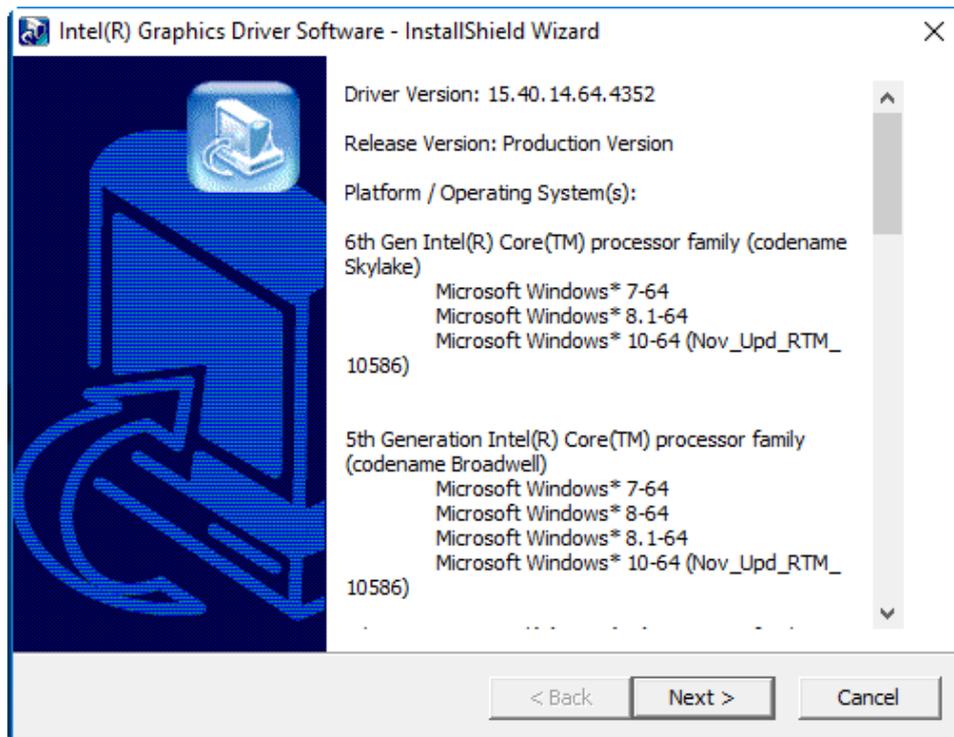




Step 3. Click **Next** to setup program.




Step 4. Click **Yes** for agree the license in Intel Agreement.

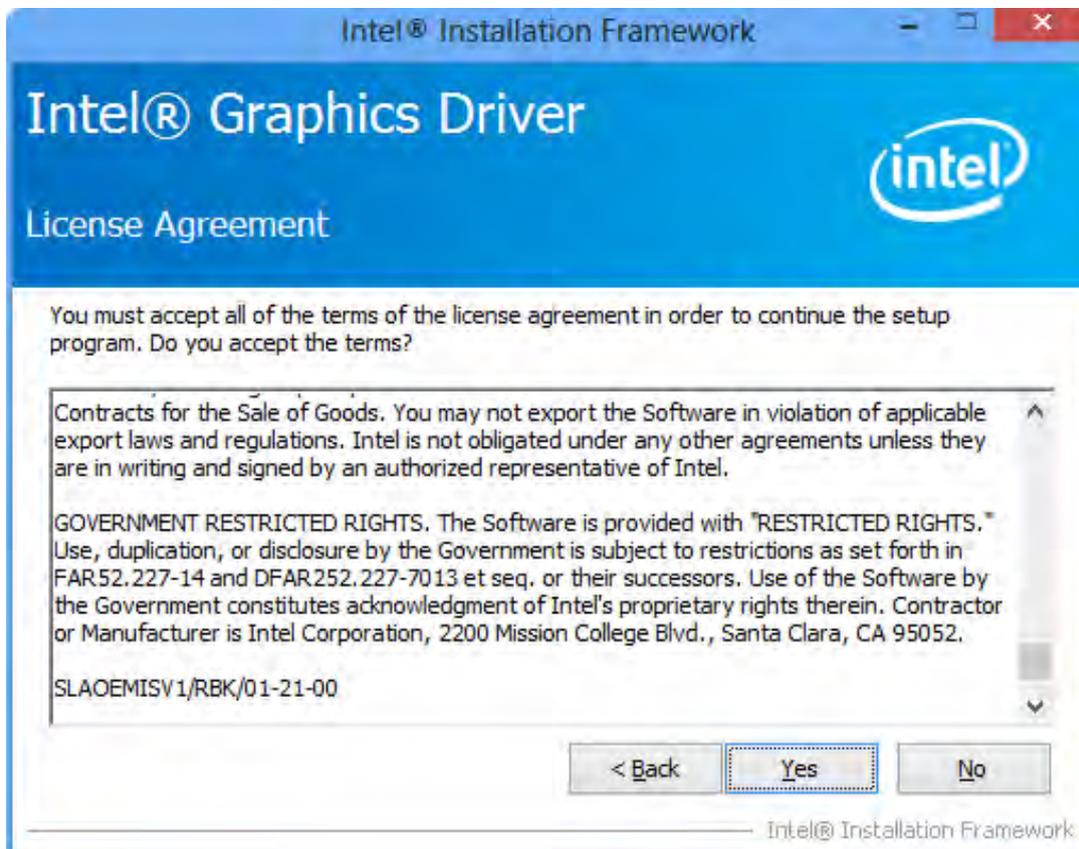




Step 5. Click **Next** to continue.

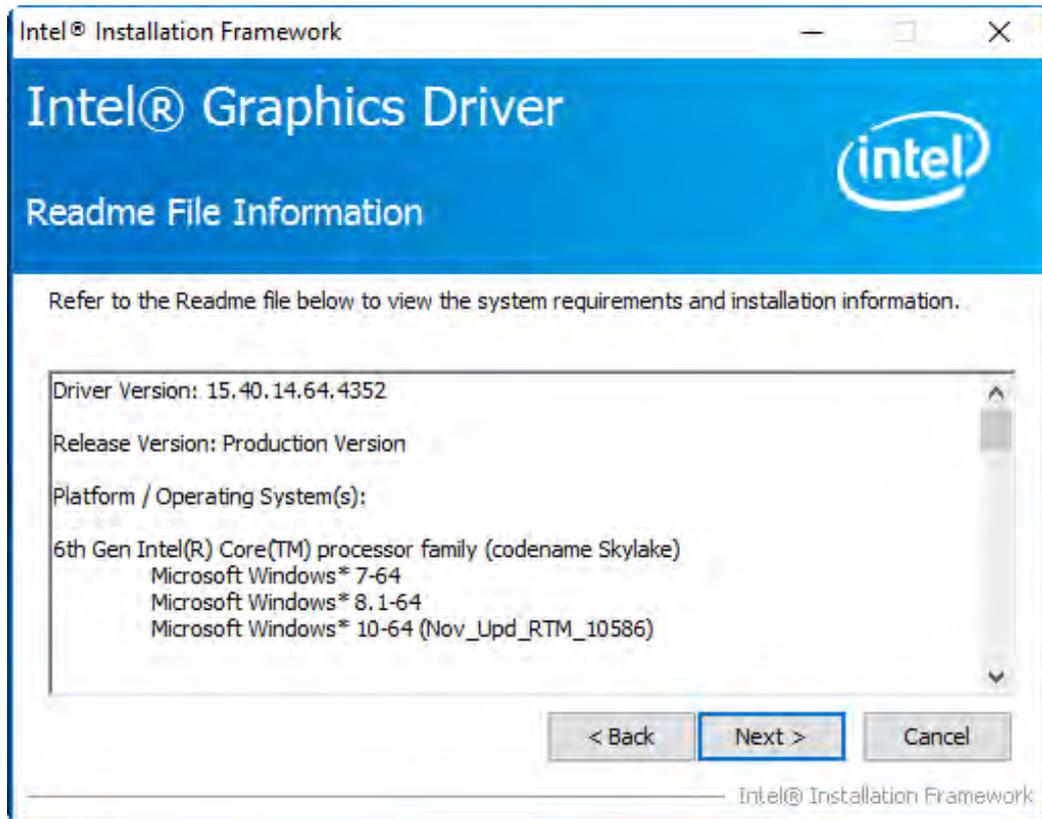


Step 6. You can choose **Accept** or **Decline** for join the intel® product improvement program. The Intel Company may collect information about how you use your system and software.

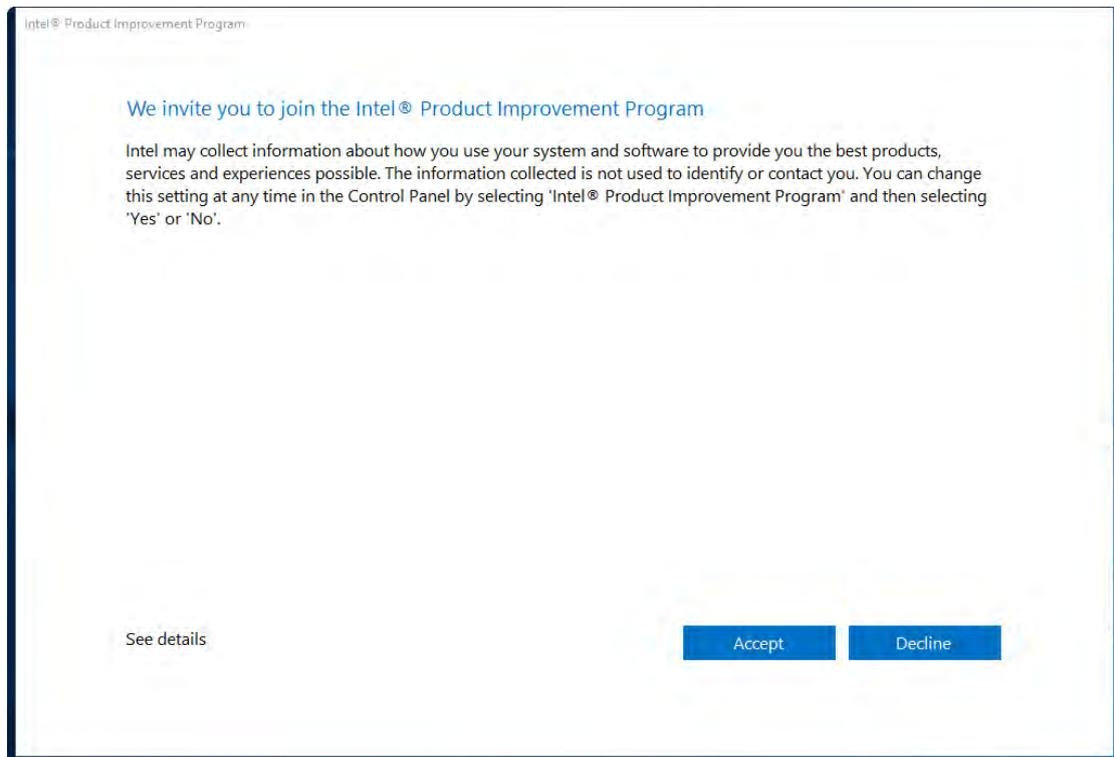



Step7. Click **Next** to continue.

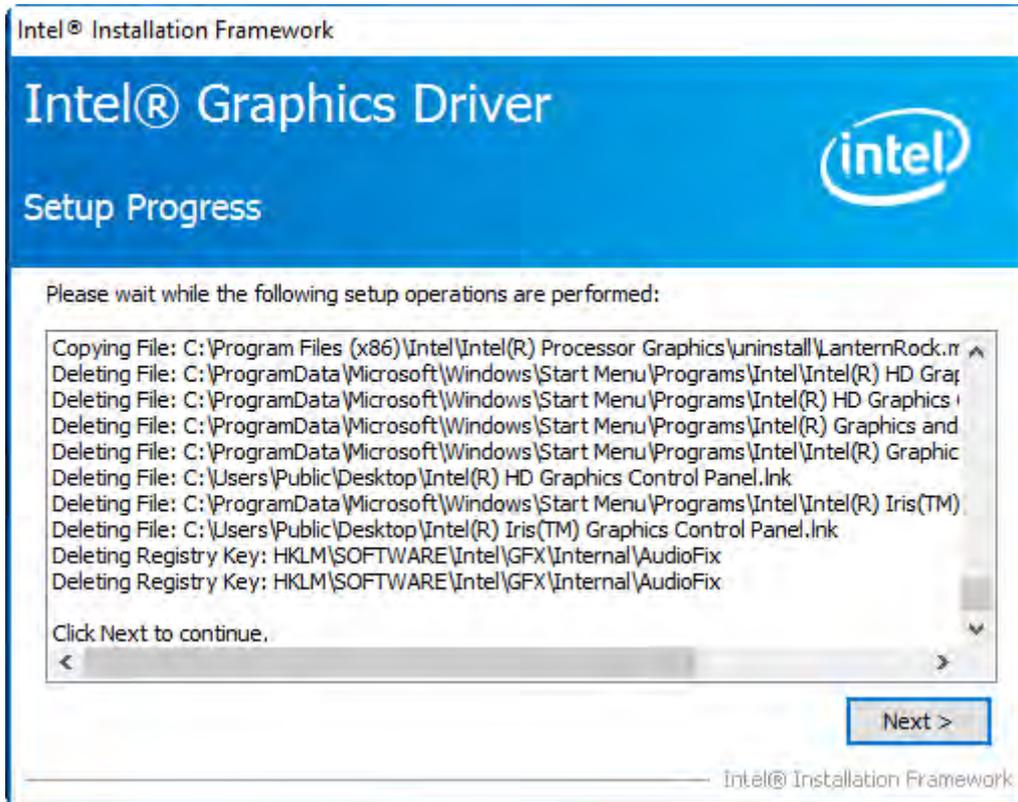

Step8. Select **Yes, I want to restart this computer now.** Then click **Finish** to complete the installation.




4.3 Realtek ALC269 HD Audio Driver

To install the Realtek ALC269 HD Audio Driver, please follow the steps below.

Step 1. Select **Realtek ALC269 HD Audio Driver** from the list




Step 2. Click **Next** to continue.

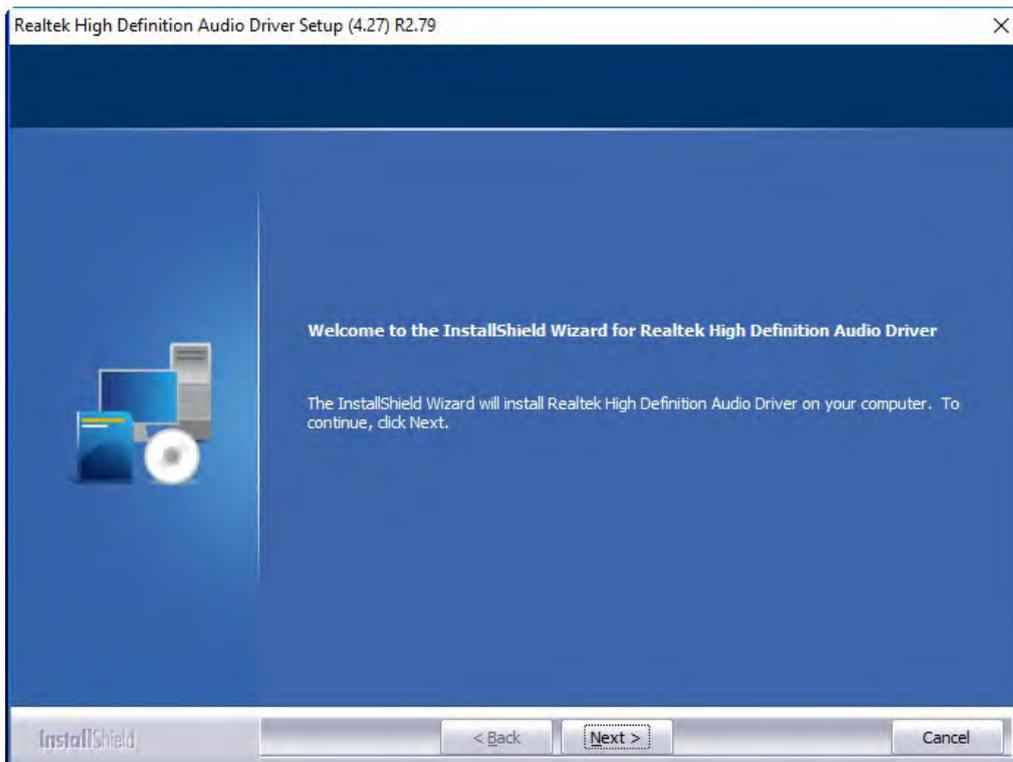



Step 3. Click **Yes, I want to restart my computer now.** Click **Finish** to complete the installation.

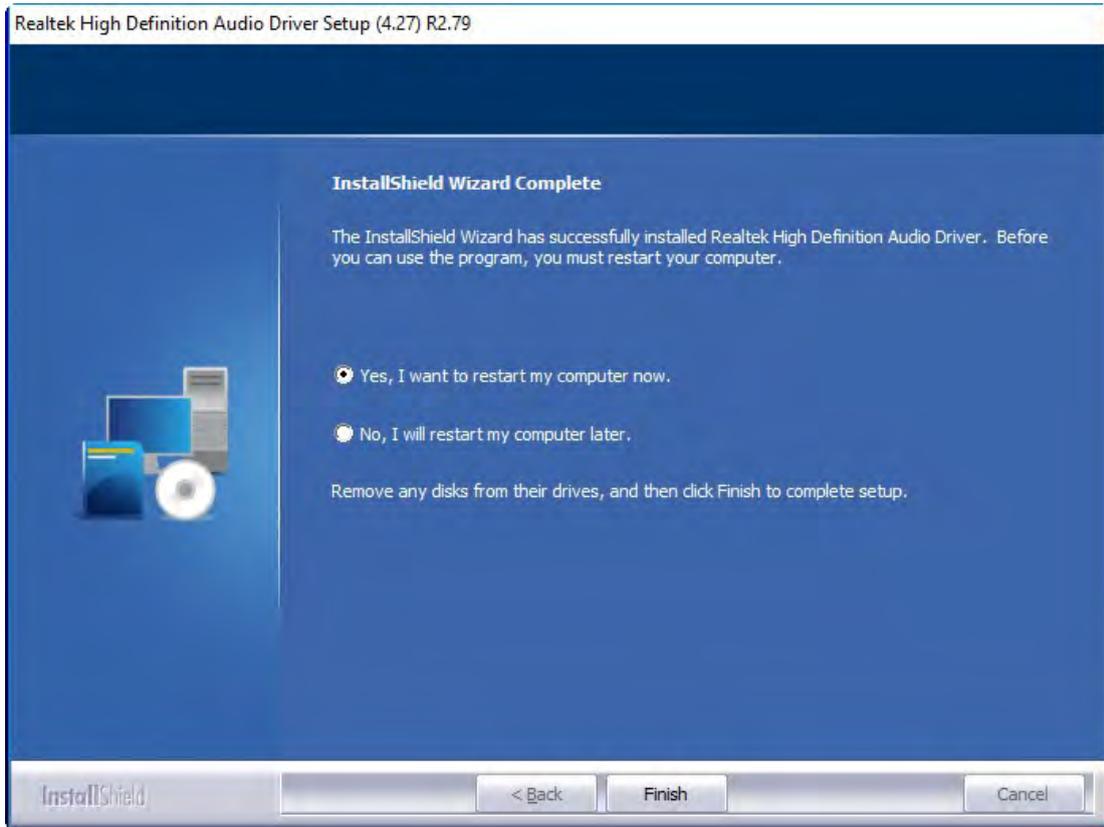



Connect
Ideas.
Shape
solutions.